

Usage instructions **IN 6 EASY STEPS**




1 Place the spray gun with the paint channel on the spray gun nozzle.




2 Connect the compressed air coupling to the air connection of the spray gun.




3 Open the spray gun with the trigger clamp. Close washroom door and set timer to 2-3 minutes.

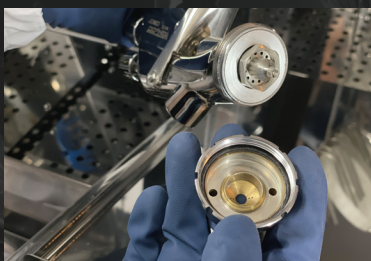

4 Remove the trigger clamp from the spray gun and blow off the cleaning fluid from the spray gun. Meanwhile, leave the compressed air coupling connected and do not pull the trigger of the spray gun.

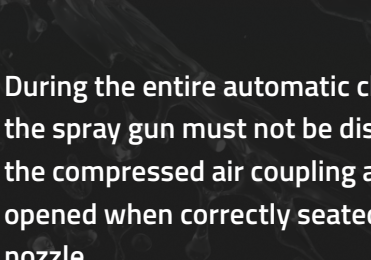

5 Connect the spray gun to the outside compressed air coupling of the blow gun and blow the spray gun out in the washer. Wipe the spray gun dry with a microfibre cloth.

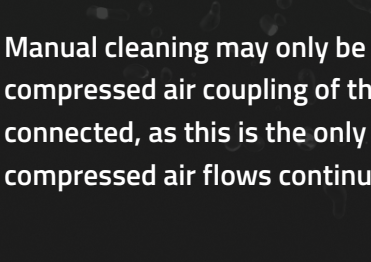

6 Check the air cap of the spray gun from the inside for fluid residues and contamination.

During the entire automatic cleaning process, the spray gun must not be disconnected from the compressed air coupling and must only be opened when correctly seated on the spray gun nozzle.

Manual cleaning may only be done with the compressed air coupling of the air blow gun connected, as this is the only source where compressed air flows continuously.

Before the next painting cycle, the paint channel and the inside of the air cap must always be free of cleaning fluid.

Failure to follow the application instructions may result in paint wetting problems!

